



INJECT




QUICK GUIDE FOR THE USE OF INJECT

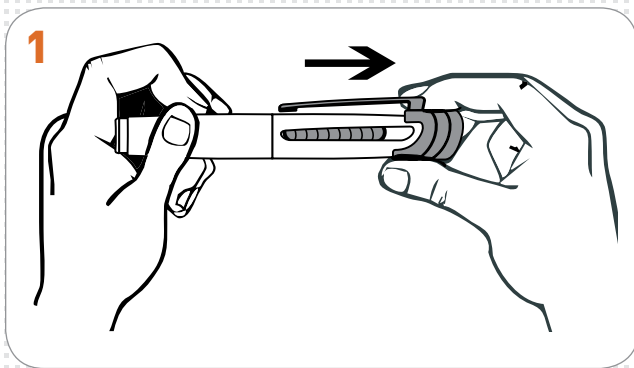


1 Remove the cap from the autoinjector.

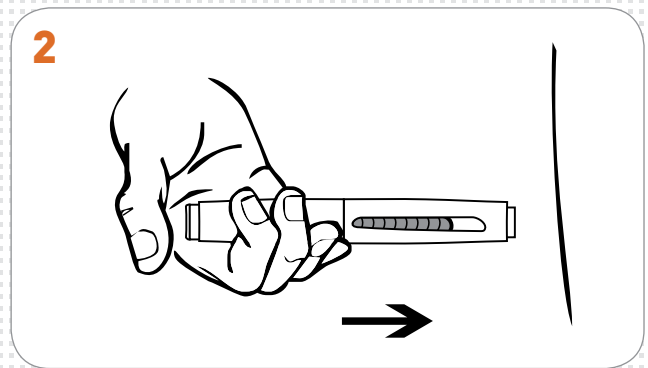

2 Press and hold the autoinjector on the injection site.

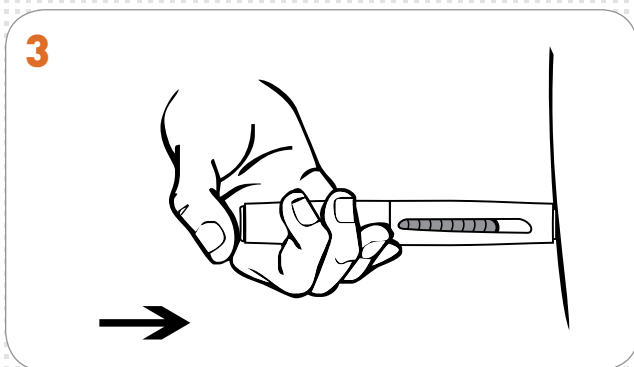

3 Press down on button to inject.

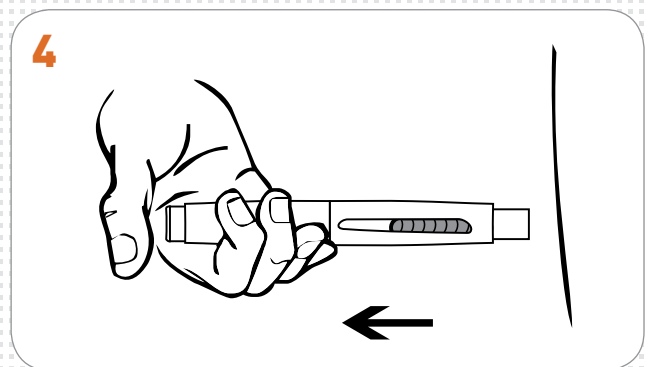

4 Remove autoinjector from injection site.
Needle protection sleeve will automatically slide out.
Dispose of the autoinjector.